
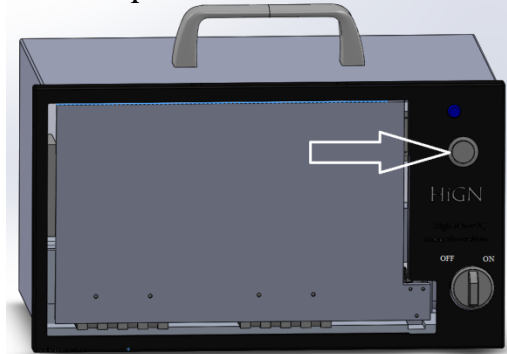



HiGN

High Intensity Germ Neutralizer Standard Operating Procedure

1. Turn the machine on. (Make sure the door is in the closed position. – If it is not, turn the machine off and start again)
2. To start the process, push the main button as shown below. The door will open and be ready to accept whatever part needs to be sterilized.

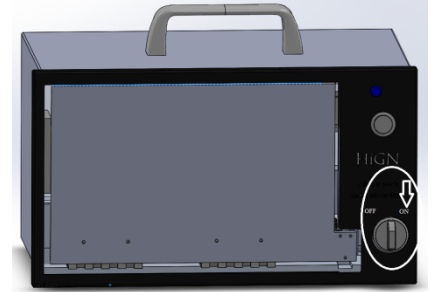

3. With the door open and the part in the machine, push the same button again and the door will close. when the door closes, the blue light above the start button will turn on and the UV sterilization will begin. The light remains on for 10 seconds with the door closed and then automatically opens when the process is complete.

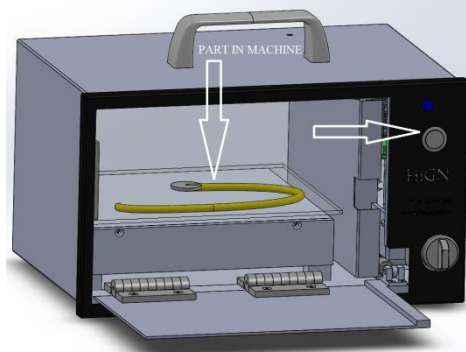

4. Remove the part from the machine. There is a sensor that triggers as you remove the part and the door will automatically close 3 seconds after that sensor is triggered when the part is removed.

STERILIZATION COMPLETE!

